

PB
20
VOLT

THE ORIGINAL
PINK BOX

INSTRUCTION MANUAL

Cordless/Brushless 20Volt Li-Ion WET & DRY VACUUM CLEANER

Part Number: PB20VWDV

IMPORTANT: Read before using.



Compatible Batteries:
PB20VLB2 Battery (2.0 Ah)
& PB20VLB4 Battery (4.0 Ah)

www.theoriginalpinkbox.com



Keep these instructions with the accompanying tool for the life of the tool. Read all of the instructions before assembling, operating or maintaining this tool.

This manual has been compiled by **The Original Pink Box** Tools describing the purpose for which this tool has been designed, and contains all the necessary information to ensure its correct and safe use. By following all the general safety instructions contained in this manual, it will ensure both tool and operator safety, together with longer life of the tool itself.

All photographs and drawings in this manual are supplied by **The Original Pink Box** Tools to help illustrate the operation of the tool.

Whilst every effort has been made to ensure the accuracy of information contained in this manual, **The Original Pink Box** Tools policy of continuous improvement determines the right to make modifications without prior warning.



**Compatible Batteries: PB20VLIB2 Battery (2.0 Ah)
& PB20VLIB4 Battery (4.0 Ah)**

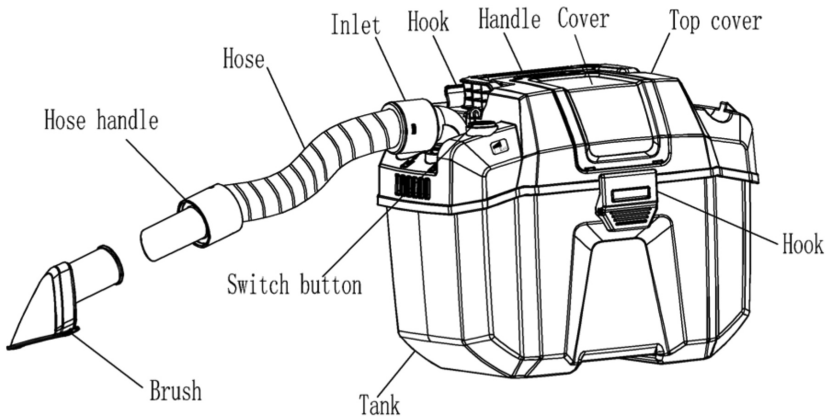
www.theoriginalpinkbox.com

Contents:

- Description of the appliance
- Appliance figure
- Important safety instructions
- Assembly
- Operation
- Cleaning and maintenance
- Error detection
- Technical data









Description of the appliance:

- Powerful and compact.
- Wet & Dry
- Multiple air filter system guarantees a hygienic cleaning.
- With special air-blowing function.
- Special parking position for easy use and space saving.
- User-friendly design.


 


 

Appliance figure:

Important safety instructions:



 

This appliance is not intended for use by persons(including children)with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.


 

⊘	Do not vacuum any sharp-edged, hot or incandescent materials.	
⊘	The appliance should not be exposed to heat.	
⊘	Do not put any object into openings. Do not use with any opening blocked. Keep free of dust, lint, hair etc.	
⊘	Do not use the vacuum cleaner without dust container or dust filter in place.	
⊘	Do not vacuum any flour, cement etc, in order to avoid the overloads.	
⊘	The appliance should be cleaned with a dry or damp cloth only; it should never immersed in water. Do not use any solvents for cleaning.	
⊘	This appliance is intended for domestic use only and not for commercial applications.	
⊘	The nozzle or brush should be avoided to touch the surface of the furniture.	

Assembly:

 
 

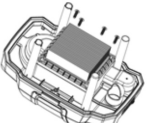



Open the buckles, to release the top cover.	
Take out all accessories	
Fix the top cover back, and lock the buckles	
Hook assembly: 1. Insert the hook into the right position on top cover 2. Turn upward, enable the hook onto top cover completely	
Fix the hose well	
Fix the brush onto the right position	

Operation:

	Assembly the battery pack: 1. open the cover 2. insert the battery pack
	Pull out the hose
	Push switch button, vacuum cleaner start to work. Remark: Press one time, working under low power. Press again, working under high power. Press again, power off
	The light will be in green when working under low power. The light will be in red when working under high power

	<p>Please attach the brush if you want to clean water from the ground .</p>
	<p>When inlet insert to position ①, it is air blowing function. When insert to position ②, it will be dust and water cleaning function. Remark: Please open the cover to start using blowing function, and put it back when finish.</p>
	<p>Please take the battery for charging if it is lack of power or you will keep the appliance unused for a long time</p>

Cleaning and maintenance:

	<p>Release the hook</p>
	<p>Take out the top cover</p>
	<p>Cleaning the dust</p>
	<p>Release 4pcs screws by tools, take out the filter</p>
	<p>Wash off the Filter with cleaning water. (In necessity)</p>
	<p>Dry the filter in cool and ventilated place Attention: Do not put it in the sunshine.</p>
	<p>Assemble the vacuum cleaner.</p>

Error detection:

Before you contact our service center, please check the following:

Problem	Possible reason	Advice
Motor does not start	- no battery - no power for the battery -Vacuum is not power on	- insert the battery - battery charging -Power on the vacuum
Suction power is weaker	-Unit is clogged -Filter is clogged -Top cover is not fixed well	-Remove the blockage. -Clean or change the filter - Fix well the top cover